Playtime Toys

POWER RIDERS

*We put the power in playtime!*

# USER'S MANUAL

## ITEM# 90331M
## INDIAN CHIEF

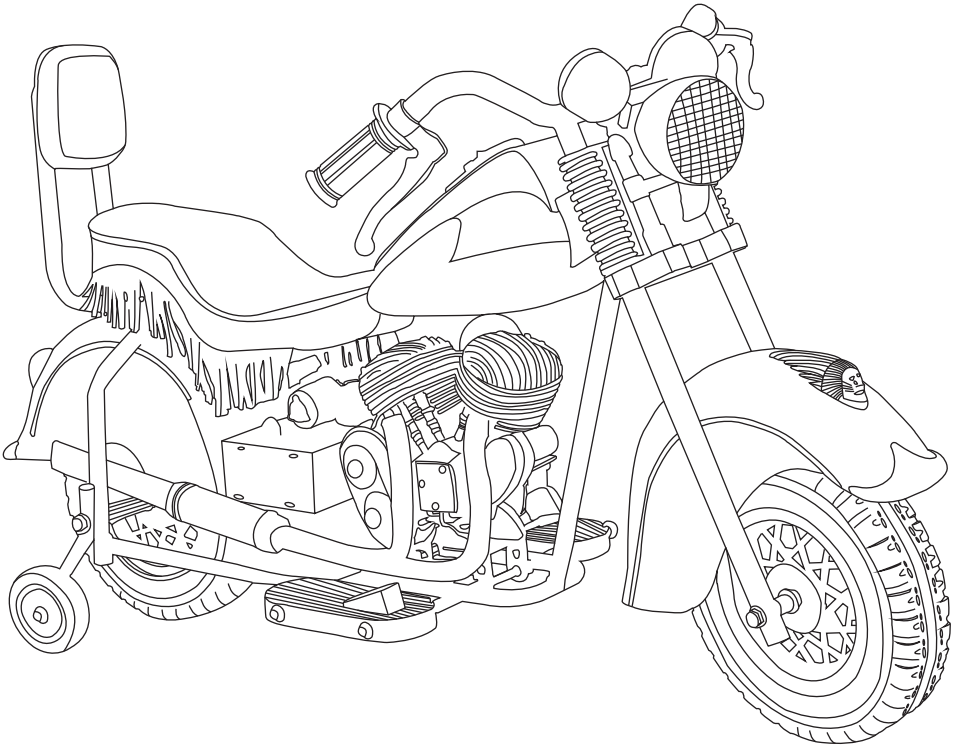

Illustrations are representative only, design and style may vary.
Please carefully read this manual before use and keep for future reference.

Authorized & Reserved by Powerrider Toys Int'l Co., Ltd

# ASSEMBLY INSTRUCTIONS

## WARNING:

Assembly should be performed by adults only. Never allow children to play with the small parts or the plastic bag the vehicle is placed in. Injury may occur. Small parts could be a choking hazard! Polybags could be a suffocation hazard to small children. Dispose of these bags in appropriate refuse container.

## TECHNICAL DATA

Speed: 3 MPH, 4 km/hr
Battery: 6V10AH sealed dry cell battery
Time for charging: 8 – 12 hours
Ages: 3 – 6
Load Max capacity: 66 pounds/ 30 kgs.
Charger: Input 120 - 240Volt, depending on local voltage; Output 7.5V1000mA
Life of Battery: Approximately 200 hours, 300 charges. Depending on usage.
Working time: About 40 to 90 minutes, depending on rider,road surface and whether battery was fully charged.
Functions: Forward,backward,stop, brake,working headlight and engine sound.

## PARTS LIST

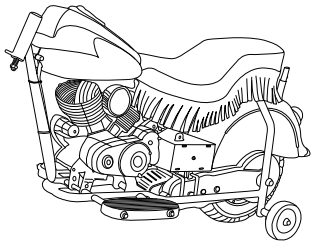

1. Vehicle body

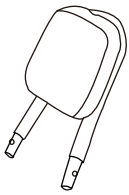

2. Rear rest seat

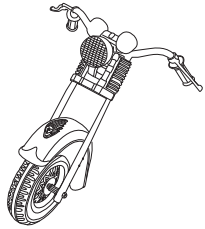

3. Front fork assembly



4.Charger

**WARNING:**
CHOKING HAZARD - Small parts not for children under 3 years !

# ASSEMBLY OF VEHICLE

Tools Needed (not included):
1 Phillips head screwdriver.

**WARNING:**

ADULT ASSEMBLY REQUIRED!

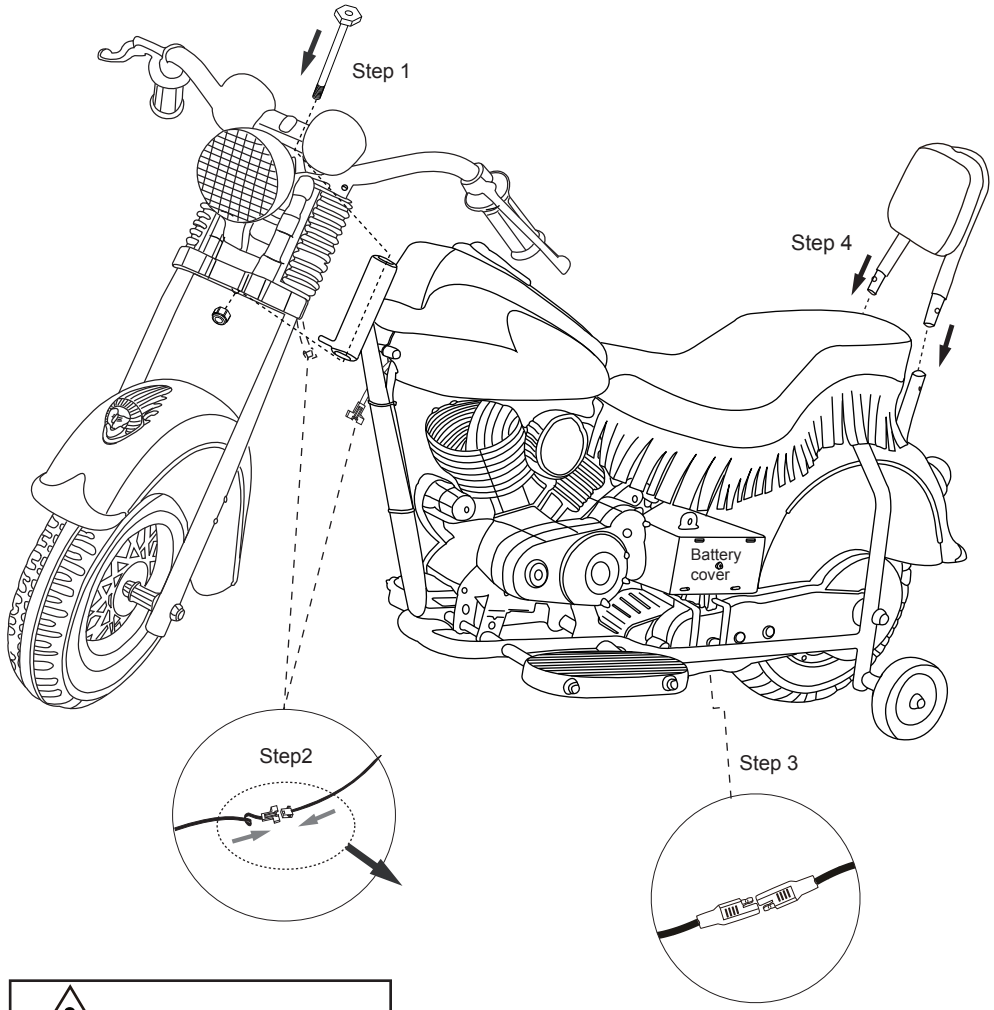


**WARNING:**

Protective equipment should be worn,Not to be used in traffic!



1. Remove the steering rod and nut from the front fork assembly. Line up the holes on the front fork assembly with the holes on the body,insert the steering rod and attach the nut. Tighten the steering rod and nut with the hand.
2. Connect the two plugs for the headlight. Never forcely plug the wire.
3. Connect the two plugs for the power. The motorcycle is ready to run.
4. Insert the rear rest seat two poles into the holes of the metal fork at the back of the vehicle body. Align the holes on the metal fork with the pins on poles of the rear rest seat until they click into the holes tightly.

## CHARGING THE BATTERY

5. The battery compartment is located underneath the seat. Check the two plugs,one is from battery wire, another from motor wire.
6. Unplug the battery from wires.
7. Plug the charger into the battery.
8. Insert the charger plug into a wall outlet. After 8 - 12 hours vehicle should be fully charged. Unplug the charger from the wall outlet and disconnect the charger from the battery.
9. After fully charged, plug the battery wire to the vehicle wire. The vehicle is now ready for use.

## REPLACING BATTERY

10. Unplug the battery from wire.
11. Unscrew and remove the battery compartment cover.
12. Unplug the battery connectors and remove the exhausted battery from the battery compartment then put the new battery into the battery compartment.
13. Plug the battery connectors as specifically designed, always red to red,black to black.
14. screw the battery compartment cover securely.
15. To charge the new battery refer to “charging the battery”
16. Dispose of the exhausted battery in an appropriate waste collection center.

You can help protect the environment! Please remember to respect local regulations:
Turn in the non-working electrical equipment to an appropriate waste disposal center.

## IMPORTANT:

To prolong battery life, you must recharge the battery after each use. You must also charge your battery if it has not been used for 30 days or more.

## OPERATION

1. To change the direction of the vehicle, set the direction switch to:
   - “Forward” position, step on the accelerator, the vehicle moves forward,
   - “Reverse” position, step on the accelerator, the vehicle moves in reverse.
   - Middle position “Neutral”, step on the accelerator, the vehicle will not move.
2. Headlight comes on when the vehicle moves forward.
3. Engine sound comes on when pressing the button on the gas tank.
4. Step on brake pole on the rear of the foot rest, the motorcycle will stop running.

## WARNING:

1. NEVER change the direction by pressing the Forward/Backward switch while the vehicle is moving. You must always come to a stop before changing direction.
2. This toy is unsuitable for children under 3 years due to its maximum speed.

# OVERLOAD PROTECTION

This vehicle ( battery) is equipped with an auto - recovery device. If the vehicle is overloaded or operated incorrectly, or power current is greater than the electrical system is designed to accept, the device will shut off power automatically. The vehicle will stop working. After one or two minutes, the device will reset itself and the vehicle will work normally.

# RECHARGING PRECAUTIONS AND WARNING

1. The charger is not a toy. The battery should be charged by adults only.
2. Do not allow children to play with the charger or to recharge the battery.
3. Before the first use, you should fully charge the battery for 8 -12 hours. Do not charge the battery for more than 15 hours to avoid overheating the charger.
4. To recharge the battery, plug the charger into vehicle then into household wall outlet,the battery will begin charging. After the battery is fully charged, unplug the charger from the battery and wall outlet.
5. It is normal for the charger to feel warm during charging, but if the charger feels very hot, stop charging and check the battery and charger for damage.
6. When the vehicle begins to run slowly, recharge the battery.
7. To lengthen the life of the battery, always recharge the battery before storing and at least every three months thereafter.
8. Use only battery and charger of the same type as recommended by the manufacturer.
9. Do not connect the battery terminals together or the vehicle will short circuit.
10. Charger should be examined regularly for damage to the cord, plug and other parts. If any damage is found,charger should be repaired or replaced immediately.
11. Do not use a damaged charger.
12. For long term storage,disconnect the wires from the battery terminals.

# IMPORTANT!

- Adults should read this manual carefully before allowing a child to use the vehicle. Vehicle should be assembled by an adult.
- Child should always be supervised by an adult when operating the vehicle.
- Do not overload,maximum weight 66LBS/30kgs.
- Only 1 child should ride on this vehicle at a time.
- Do not operate vehicle on sandy, muddy, or rugged surfaces to avoid damage to the vehicle.
- Do not ride the vehicle in dangerous places such as busy streets, roads, or highways.
- Never ride the toy in hilly areas or on steep slopes. Never ride the toy near swimming pools or other bodies of water. Never ride in the dark or in dimly lit areas.
- Do not clean the vehicle while the charger is attached.
- Clean the vehicle only with a damp cloth—never submerge vehicle in water or spray vehicle with water from a hose.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Recommend protective equipment when in use, such as helmet,gloves,knee-pads, elbowpads,etc
- Dispose of all batteries and non-working electrical equipment in appropriate waste disposal centers.

# ELECTRICAL AND ELECTRONIC EQUIPMENT THAT ARE SUPPLIED WITH BATTERIES (INCLUDING INTERNAL BATTERIES)

WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection center for the recycling of electrical and electronic equipment.

Internal / Supplied Batteries
Notice to customers
This symbol on the battery indicates that the battery is to be collected separately.

**The following applies only to users in European countries.**

This battery is designed for separate collection at an appropriate collection center.
Do not dispose of as household waste.
For more information, contact the retailer or local authorities in charge of waste management.

## TROUBLE SHOOTING

1. If the vehicle fails to move.
   - Make sure the direction switch is not set to the middle position.
   - Make sure the battery wires are connected properly.
   - Recharge battery, if necessary.
   - Check to see if overload,relay triped.
   - Check the battery. If it is damaged or exhausted, replace it.
2. If the vehicle runs slowly: Recharge the battery.
3. If the battery cannot be recharged: Battery or charger may need to be replaced.
4. If the headlight or taillight does not work, check to see if the wires are loose.
5. If the vehicle still fails to operate,contact our service center.

---

# WARNING:

TO REDUCE THE RISK OF INJURY, ADULT SUPERVISION IS REQUIRED. NEVER USE IN ROADWAYS,NEAR MOTOR VEHICLES,ON OR NEAR STEEP INCLINES OR STEPS, SWIMMING POOLS OR OTHER BODIES OF WATER;USE THE TOY ONLY ON FLAT SURFACES, SUCH AS INSIDE YOUR HOUSE, SIDEWALKS, OR PLAYGROUND. ALWAYS WEAR SHOES, AND NEVER ALLOW MORE THAN 1 RIDER.